

MODE OPÉRATOIRE POUR LA FIXATION DES ESCALIERS AUX SPAS




FIXATION DES TASSEAUX

1. Composition du kit

| Référence | Désignation | Quantité |
|-----------|--|----------|
| 0037880 | Notice fixation des tasseaux et de l'escalier sur le spa | 1 |
| 31090108 | Tasseau pour escalier de spa | 2 |
| 7644270 | Vis VB FZ ST 3,5x40 inox A2 | 4 |
| 7644590 | Vis VB FZ ST 5,0x80x50 inox A2 | 2 |

2. Montage du kit


RÉALISER un pré perçage débouchant Ø 5 mm à 281 mm du bas de l'escalier et à 15 mm du bord. L'escalier étant fixé des 2 côtés, RÉALISER la même opération de l'autre côté.

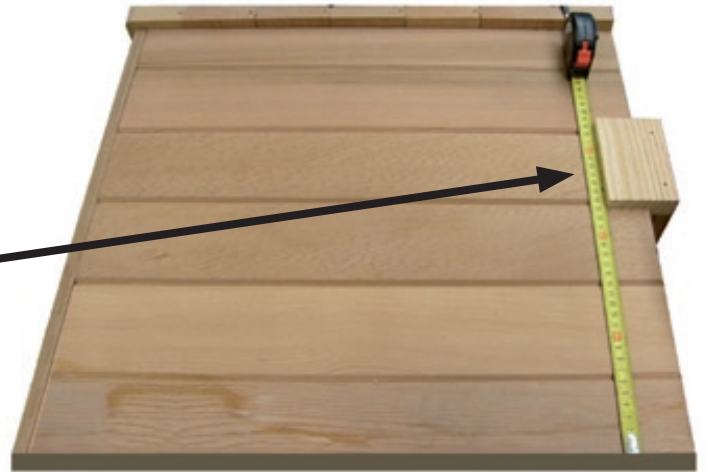

POSITIONNER les tasseaux face à la contre platine et les positionner à 166 mm du dessus du tasseau inférieure de l'ossature. VISSER et SERRER les tasseaux sur l'ossature en utilisant 4 vis Vis VB FZ ST 3,5x40 inox A2 (visseuse + embout cruciforme)

FIXATION DE L'ESCALIER SUR LE SPA

3. Positionnement de l'escalier

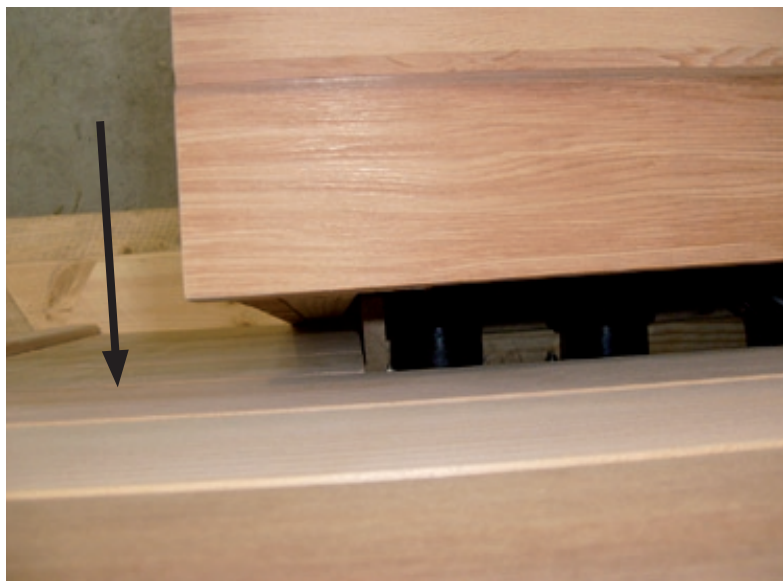

ATTENTION : POUR CETTE OPÉRATION, L'ESCALIER DOIT ÊTRE CALÉ AVANT LE VISSAGE AU SPA
PRÉSENTER, POSITIONNER ET SERRER l'escalier sur le spa (se servir des 2 avant-trous précédemment réalisés) en utilisant 2 vis VB FZ ST 5,0x80x50 inox A2 (visseuse + embout cruciforme)

INSTALLATION INSTRUCTIONS ***- ATTACHING STEPS TO SPAS***




ATTACHING THE CLEATS

1. Kit composition

| Reference | Description | Quantity |
|-----------|--|----------|
| 0037880 | Installation instructions: attaching steps and cleats to spas | 1 |
| 31090108 | Cleats for spa steps | 2 |
| 7644270 | Countersunk zinc plated self-piercing screw 3.5x40 A2 stainless steel | 4 |
| 7644590 | Countersunk zinc plated self-piercing screw 5.0x80x50 A2 stainless steel | 2 |

2. Assembly of the kit

Drill a hole, diameter \varnothing 5 mm, 281 mm from the bottom of the step and 15 mm from the edge. As the step must be attached at both sides, repeat the operation on the other side.

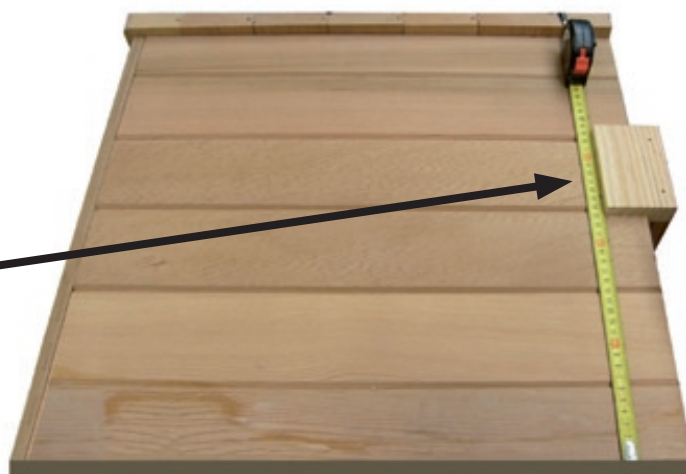

POSITION the cleats opposite the spa pack 166 mm above the bottom cleat of the wooden framework. SCREW and FASTEN the cleats to the framework using the 4 countersunk zinc plated self-piercing screws, 3.5x40 A2 crew gun with phillips bit)

MOUNTING THE STEPS ON THE SPA

3. Positioning the steps



CAUTION: BEFORE TIGHTENING THE SCREWS, MAKE SURE THAT THE STEPS ARE CORRECTLY POSITIONED AGAINST THE SPA.

POSITION the step against the spa (use the 2 pre-drilled holes) using the 2 countersunk zinc plated self-piercing screws, 5.0x80x50 A2 stainless steel (screw gun with phillips bit).

